

Help- The device doesnt vibrate/switch on.

The battery mole repeller requires 4 x "D" batteries. Make sure the batteries are inserted correctly, refer to the diagram below.

Insert 4 x "D" Batteries

Help-I've got more mole hills than before I started using the device.

There is a possibility of increased activity when you start using the device, recognized by more mole hills appearing. This is probably because the moles are being disturbed by the noise and are looking for a way out. If mole hills appear between the device and your house, reposition the device between your house and the nearest mole hill. Make sure you haven't trapped the moles. See Location and Positioning (above).

