

CHIM CHIMENEA USER GUIDE

Your chimenea has been crafted from cast iron giving a modern day twist on the age-old Mexican design. Traditionally made from clay, used for cooking and supplying a source of heat these timeless chimeneas are used in much the same way by people today.

TO ENSURE MAXIMUM SATISFACTION AND SAFETY PLEASE ENSURE YOU READ ALL OF THE POINTS BELOW

- Ensure your chimenea is on a flat level flame-proof surface.
- When starting your fire use kindling at first and light with fire sticks or rolled up newspaper. Once the fire is going add 2-3 small logs to keep it burning. This is more than enough to keep you warm, whilst keeping your fire under control.
- All our cast iron chimeneas are treated with high temperature paint. To prepare your chimenea for first use you will need to have 2-3 small fires lasting between 15-20 minutes before using your chimenea for cooking; this will ensure your chimenea has completely cured, with soot naturally filling any gaps in the chimney and bowl.
- All cast iron chimeneas will rust; this is part of cast iron's beauty and part of the natural ageing process. You can slow this process down by not over firing your chimenea. Carefully use a wire brush to rid your chimenea of any surface rust and touch up with high temperature paint as required. We recommend fully re-painting your chimenea annually.
- Never leave your chimenea unattended when lit and be aware of children and animals, ensuring they are at a safe distance at all times.
- Be sure there are no flammable objects above, around or in contact with your chimenea during use.
- Always use in a well-ventilated area, these are designed for outdoor use only.
- We strongly recommend only burning naturally dried non treated and non painted wood. Charcoal can be used but can prove difficult to light. To get the best use of your chimenea, we recommend burning hard-wood to produce wood coal, this will be hot enough to then light the coal. Another option is to use self-lighting charcoal. Do not use flammable liquid of any kind to light your chimenea; using any lighting fluid in an enclosed stove could cause an explosive hazard.
- Allow your chimenea to burn out and cool naturally. Never use water to extinguish the fire as this may cause damage to you and the chimenea.
- Always avoid getting water in your chimenea, use the lid provided and always cover your chimenea when not in use. Deluxe Chim Chimenea rain covers are available at www.primrose.co.uk. We also recommend storage in your shed or garage during the frost prone months of the year.
- Always ensure your chimenea has completely cooled before moving or covering.

We hope that by following theses simple guidelines you will experience many years of enjoyment from your new Chim Chimenea.



Santa Lucia Cast Iron Chimenea INSTRUCTIONS





<u>Small: 85cm x 47cm x 40cm</u>



1. Screw 3x feet on with 6x large screws.



2. Screw vent on with 2 x small screws

3. Screw 3x inside brackets with 3x medium screws (loosely) then place lid on and screw to brackets with 3x medium screws, tighten.



4. Attach swing grate with 2x small screws







5. Attach door with 2x small screws and door lock with 2x small screws





6. Attach handles on with 2x special screws



7. Attach chimney with 3x x-large screws (make sure seam lines up with the side of the chimenea)





<u>Medium: 110cm x 50cm x 45cm</u>



1. Screw feet on with 6x x-large screws



2. Screw vent on with 2 x small screws

3.Screw 3x inside brackets with 3x medium screws (loosely) then place lid on and screw to brackets with 3x medium screws, tighten



4. Attach swing grate with 2x small screws







5. Attach door with 2x small screws and door lock with 2x small screws





6. Attach handles on with 2x special screws



7.Attach middle chimney with 3x x-large screws (make sure seam lines up with the side of the chimenea)

8. Attach top chimney with 3x large screws





Large: 126cm x 52cm x 45cm



1. Attach feet with 6x x-large screws



2. Screw vent on with 2 x small screws

3.Screw 3x inside brackets with 3x medium screws (loosely) then place lid on and screw to brackets with 3x medium screws, tighten



4. Attach swing grate with 2x small screws







5. Attach door with 2x small screws and door lock with 2x small screws





6. Attach handles on with 2x special screws



7.Attach middle chimney with 3x x-large screws (make sure seam lines up with the side of the chimenea)

8. Attach top chimney with 3x large screws

