 




Instruction Manual Electric Patio Heater

Model: OL1822

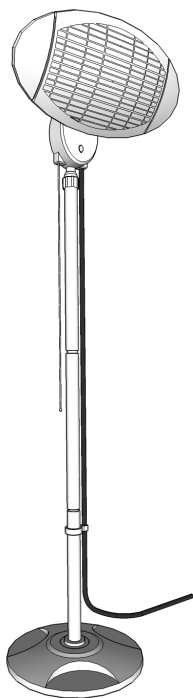


**Please read these instructions carefully before
using your new halogen heater**

Caution



Only use the halogen heater on a firm solid horizontal area where all the feet are in contact with the floor. (This heaters has an “auto cut off” safety feature which switches the heater off when tilted)

1. Set up the heater outside, or in a large open area and well away from any obstructions such as tree branches. Do not use the heater near any objects that can be affected by heat such as furniture, curtains or other flammable objects (minimum distance 1 metre).
2. Do not use near water i.e. bath tubs, wash areas, or swimming pools.
3. Do not use in unventilated areas.
4. Do not use where gas, petrol, paint, flammable, or corrosive goods are stored.
5. Do not push any items through, obstruct, or cover the grill of the heater head.
6. Do not position immediately above or below an electrical socket.
7. Do not move when connected to an electrical supply. Always wait for the patio heater to cool down before storing away.
8. Do not touch the heater head when in use, or still hot. The unit stays hot for some time after use.
9. Keep away from children and pets.
10. The indication of the different positions of switches should be visible from a distance of 1m.
11. Floor units must be securely placed on horizontal and flat surface. Wall units must be fitted horizontally.
12. Do not place the unit close to curtain and/or other flammable objects.
13. Do not cover the unit with anything during operation or while it is hot.
14. Do not wrap the power supply cord around the unit.
15. The unit must be securely grounded during operation.
16. If you have any doubts about the safety, or installation of this heater, please consult a qualified electrician.
17. If the power supply cord is damaged, it must be replaced by a qualified electrician to avoid danger.
18. The unit is for household use only. It is not safe to use on a building site, greenhouse, barn or stable where there's flammable dust.
19. The head of the unit reaches high temperatures during operation. Unplug the unit and wait till it cools before cleaning.
20. Do not use this unit to dry clothes, towels, etc.
21. Do not use this unit as a sauna heater.
22. Do not immerse this unit into water.
23. Two dark points may appear on the surface of the heating elements during the first few minutes after it is turned on. This is normal, and will not affect the performance of the unit.

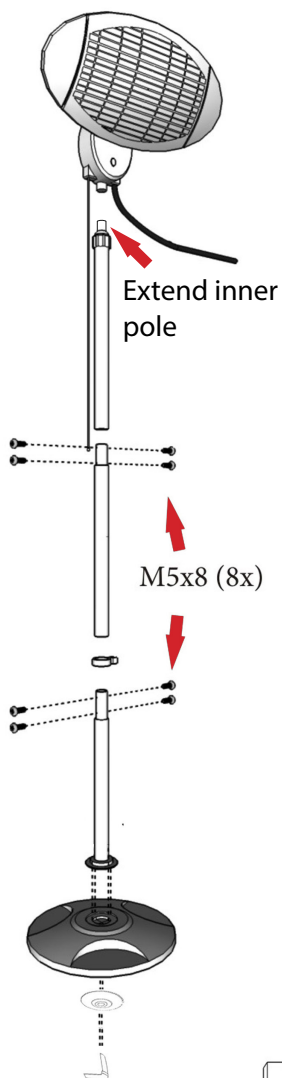

Power Indicator

Indicator	Power
0	OFF
1	650W
2	1350W
3	2000W

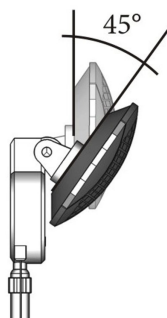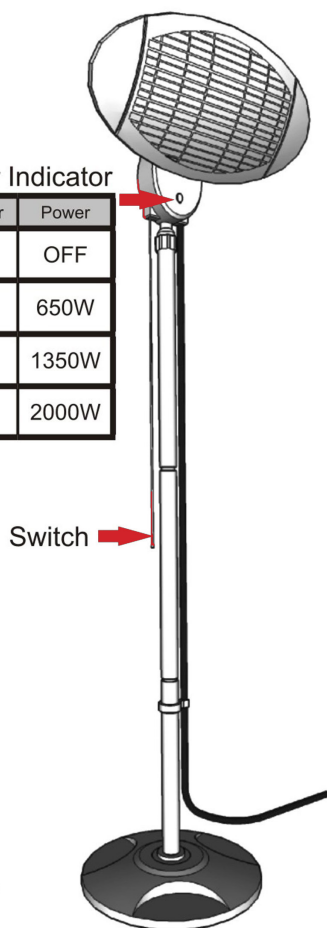

Operation

Connect the power cable to a 13 amp supply that is located in a safe, dry area.

- The switch on the heater head is used to control the four heat setting. (0) for OFF (1) for 650w - (2) for 1350w - (3) for 2000w. Although the patio heater is shower proof, do not use when raining or in wet conditions.
- Always disconnect the power cable from the electrical supply, when the patio heater is not in use.

Care and maintenance

- When disconnected from the electrical supply, clean the outside of the patio heater with a damp cloth. Never use corrosive or solvent cleaners or immerse in water.
- Any maintenance or repairs including replacing the halogen tube should only be carried out by a qualified electrician or by a recommended service center.

Technical specification

- Power supply 240V ~ 50Hz
- Wattage max 2000w
- Net weight ~9kg
- Insulation class I
- Height 120cm - 210cm

Unpack the halogen heater making sure that all the items are present and that there are no components left in the box and that the heater head is free from any packing material.

Using the detailed drawing follow the steps to assemble your halogen heater.

Do not connect the halogen heater to the electrical supply until all the assembly is complete.

Do not connect the halogen heater to the electrical supply if any of the components or the power cord is damaged in any way.

If in doubt contact your supplier.

Primrose

info@primrose.co.uk

Tel:0118 9035210(UK)

Tel: 0044 118 9035210(outside of UK)